



# **BIRD**

OPERATING INSTRUCTIONS

**THRULINE<sup>®</sup> WATTMETER**

**SERIES 4900A**

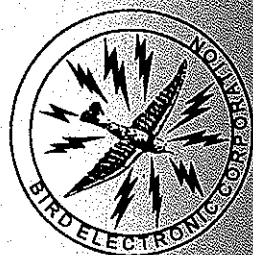

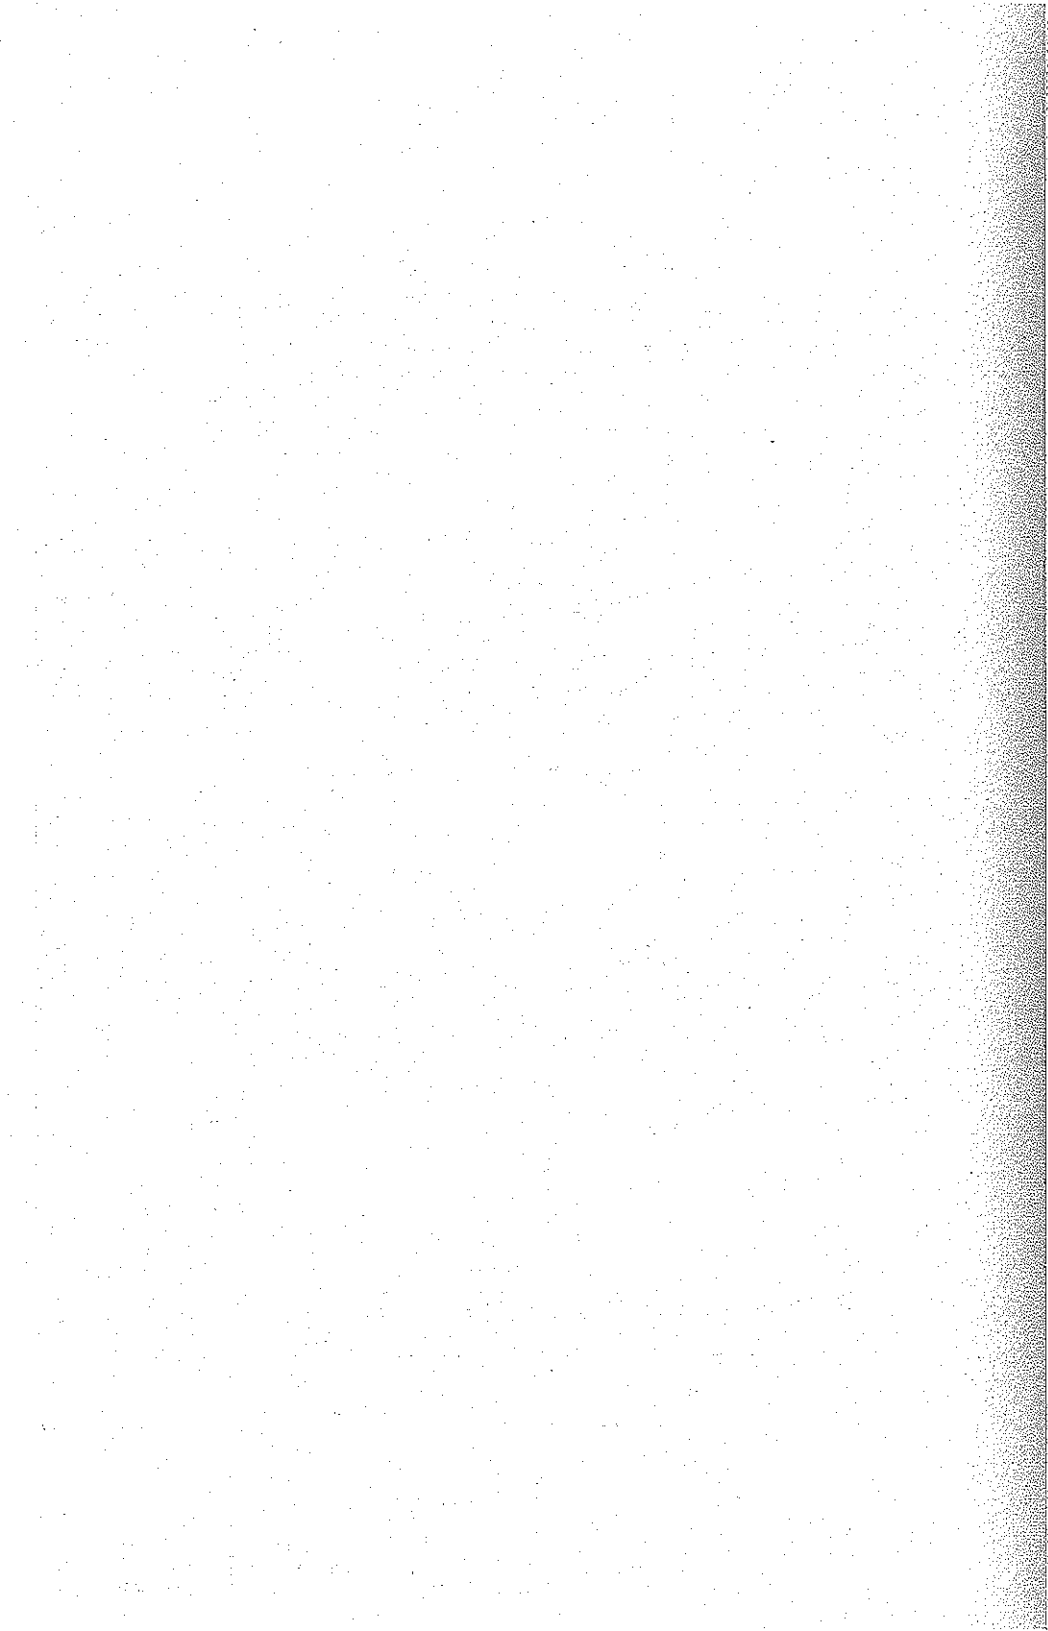

---

INSTRUCTION BOOK

**THRULINE<sup>®</sup> WATTMETER  
SERIES 4900A**

**BIRD**

**Electronic Corporation**  
Cleveland (Solon) Ohio USA

---

©Copyright 1997 by Bird Electronic Corporation  
Instruction Book Part Number 920-4900AS Rev. A

Thruline<sup>®</sup> is a registered trademark of Bird Electronic Corporation



---

## Safety Precautions



### USAGE

ANY USE OF THIS INSTRUMENT IN A MANNER NOT SPECIFIED BY THE MANUFACTURER MAY IMPAIR THE INSTRUMENT'S SAFETY PROTECTION.

### USO

EL USO DE ESTE INSTRUMENTO DE MANERA NO ESPECIFICADA POR EL FABRICANTE, PUEDE ANULAR LA PROTECCIÓN DE SEGURIDAD DEL INSTRUMENTO.

### BENUTZUNG

WIRD DAS GERÄT AUF ANDERE WEISE VERWENDET ALS VOM HERSTELLER BESCHRIEBEN, KANN DIE GERÄTESICHERHEIT BEEINTRÄCHTIGT WERDEN.

### UTILISATION

TOUTE UTILISATION DE CET INSTRUMENT QUI N'EST PAS EXPLICITEMENT PRÉVUE PAR LE FABRICANT PEUT ENDOMMAGER LE DISPOSITIF DE PROTECTION DE L'INSTRUMENT.

### IMPIEGO

QUALORA QUESTO STRUMENTO VENISSE UTILIZZATO IN MODO DIVERSO DA COME SPECIFICATO DAL PRODUTTORE LA PROIZIONE DI SICUREZZA POTREBBE VENIRNE COMPROMESSA.



### SERVICE

SERVICING INSTRUCTIONS ARE FOR USE BY SERVICE -TRAINED PERSONNEL ONLY. TO AVOID DANGEROUS ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING UNLESS QUALIFIED TO DO SO.

## SERVICIO

LAS INSTRUCCIONES DE SERVICIO SON PARA USO EXCLUSIVO DEL PERSONAL DE SERVICIO CAPACITADO. PARA EVITAR EL PELIGRO DE DESCARGAS ELÉCTRICAS, NO REALICE NINGÚN SERVICIO A MENOS QUE ESTÉ CAPACITADO PARA HACERLO.

## WARTUNG

ANWEISUNGEN FÜR DIE WARTUNG DES GERÄTES GELTEN NUR FÜR GESCHULTES FACHPERSONAL.

ZUR VERMEIDUNG GEFÄHRLICHER, ELEKTRISCHER SCHOCKS, SIND WARTUNGSARBEITEN AUSSCHLIEßLICH VON QUALIFIZIERTEM SERVICEPERSONAL DURCHZUFÜHREN.

## ENTRETIEN

L'EMPLOI DES INSTRUCTIONS D'ENTRETIEN DOIT ÊTRE RÉSERVÉ AU PERSONNEL FORMÉ AUX OPÉRATIONS D'ENTRETIEN. POUR PRÉVENIR UN CHOC ÉLECTRIQUE DANGEREUX, NE PAS EFFECTUER D'ENTRETIEN SI L'ON N'A PAS ÉTÉ QUALIFIÉ POUR CE FAIRE.

## ASSISTENZA TECNICA

LE ISTRUZIONI RELATIVE ALL'ASSISTENZA SONO PREVISTE ESCLUSIVAMENTE PER IL PERSONALE OPPORTUNAMENTE ADDESTRATO. PER EVITARE PERICOLOSE SCOSSE ELETTRICHE NON EFFETTUARE ALCUNA RIPARAZIONE A MENO CHE QUALIFICATI A FARLA.



RF VOLTAGE MAY BE PRESENT IN RF ELEMENT SOCKET - KEEP ELEMENT IN SOCKET DURING OPERATION.

DE LA TENSION H.F. PEUT ÊTRE PRÉSENTE DANS LA PRISE DE L'ÉLÉMENT H.F. - CONSERVER L'ÉLÉMENT DANS LA PRISE LORS DE L'EMPLOI.

HF-SPANNUNG KANN IN DER HF-ELEMENTBUCHSE ANSTEHEN -ELEMENT WÄHREND DES BETRIEBS EINGESTÖPSELT LASSEN.

PUEDE HABER VOLTAJE RF EN EL ENCHUFE DEL ELEMENTO RF -MANTENGA EL ELEMENTO EN EL ENCHUFE DURANTE LA OPERACION.

IL PORTAELEMENTO RF PUÒ PRESENTARE VOLTAGGIO RF - TENERE L'ELEMENTO NELLA PRESA DURANTE IL FUNZIONAMENTO.

The following are general safety precautions that are not necessarily related to any specific part or procedure and do not necessarily appear elsewhere in this publication. These precautions must be thoroughly understood and apply to all phases of operation and maintenance.

### **Keep Away From Live Circuits**

Operating personnel must at all times observe normal safety precautions. Do not replace components or make adjustments inside equipment with the high voltage turned on. To avoid casualties, always remove power.

### **Chemical Hazard**

Dry cleaning solvents used to clean parts may be dangerous. Avoid inhalation of fumes and also prolonged contact with skin.

### **Shock Hazard**

Do not attempt to remove an RF transmission line while power is present.

### **Resuscitation**

Personnel working with or near high voltages should be familiar with modern methods of resuscitation.

### **Safety Symbols**

#### **WARNING**

Warning notes call attention to a procedure, which if not correctly performed could result in personal injury.

#### **CAUTION**

Caution notes call attention to a procedure, which if not correctly performed could result in damage to the instrument.



This symbol appears on the equipment indicating there is important information in the Operator Manual regarding that particular area.

### Model 4900A Series Thruline Warning Statements

The following warnings appear in the text where there is danger to operating and maintenance personnel, and are repeated here for emphasis.

**WARNING**

Never attempt to disconnect the transmission line while RF power is being applied. Leaking RF energy is a potential health hazard.

### Model 4900A Series Thruline Caution Statements

The following equipment cautions appear in the text whenever the equipment is in danger of damage and are repeated here for emphasis.

**CAUTION**

The wattmeter, the Thruline element and the RF line section, collectively referred to as Thruline in the remainder of this section, all have matching serial numbers. Do not intermix these parts with parts from other Thruline equipment.

**CAUTION**

Do not attempt to remove the RF center conductor. It is tightly frozen in place and any attempt to remove it will ruin the assembly.

**CAUTION**

The Thruline wattmeter, elements, and line section have been calibrated together. Replacing any component without recalibrating all the components as a unit may affect accuracy.



---

## About This Manual

This instruction book covers the model 4900A Series Thruline Wattmeters. Specifically models: 4902A, 4902-037A, 4902-080A, 4905-200A, 4905-300A, 4907A, 4907-080A, and 4909-200A

This instruction book is arranged so that the essential information in safety appears in the front of the book. Reading the Safety Precautions Section before operating the equipment is strongly advised.

The remainder of this instruction book is divided into Chapters and Sections. At the beginning of each chapter, a general overview describes the contents of that chapter.

### Operation

First time users should read Chapter 1 - Introduction, Chapter 2 - Theory Of Operation, and Chapter 3 - Installation to get an overview of equipment capabilities and installation. An experienced operator can refer to Chapter 4 - Operating Instructions. All instructions necessary to operate equipment appear in this chapter.

### Maintenance

All personnel should be familiar with preventative maintenance found in Chapter 5 -Maintenance. If a failure should occur, the troubleshooting section will aid in isolating and repairing the failure. For location of parts, refer to the parts section in this chapter.

### Changes To This Manual

We have made every effort to ensure this manual is accurate. If you should discover any errors, or if you have suggestions for improving this manual, please send your comments to our factory. This manual may be periodically updated. When inquiring about updates to this manual refer to the part number and revision level on the title page.

### Reporting Errors

It is our goal to provide our users with the information needed to operate and maintain the Thruline Wattmeter Models listed above. If you should discover any errors in this publication, or if you have suggestions for improving this instruction manual, please send your comments to our factory.



---

# Table Of Contents

<b>Safety Precautions.</b> . . . . .	<b>i</b>
Warning Statements. . . . .	iv
Caution Statements. . . . .	iv
<b>About This Manual.</b> . . . . .	<b>v</b>
<b>Introduction.</b> . . . . .	<b>1</b>
Purpose and Function. . . . .	1
Performance Characteristics and Capabilities. . . . .	1
Dimensions and Weight. . . . .	1
Power And Utility Requirements. . . . .	1
Environmental Requirements. . . . .	2
Items Supplied. . . . .	2
Items Required But Not Supplied. . . . .	2
Tools And Test Equipment Required. . . . .	2
Specifications. . . . .	3
<b>Theory Of Operation.</b> . . . . .	<b>5</b>
Element. . . . .	5
Traveling Wave Viewpoint. . . . .	5
Coupling Circuit. . . . .	5
Element Socket. . . . .	7
Matching. . . . .	7
Load Power. . . . .	7
P vs. $\Phi$ and its Significance. . . . .	8
Measuring & Monitoring Transmitter Power. . . . .	9

**Installation. . . . . 11**

    Items Required. . . . . 11

    General. . . . . 11

    Coupling Kits. . . . . 11

    Models With Flanged Line Sections. . . . . 11

    Models With Unflanged Line Sections. . . . . 12

    Elements. . . . . 13

    Meter. . . . . 13

**Operating Instructions. . . . . 15**

    Zero Adjust. . . . . 15

    Use And Function Of Controls. . . . . 15

    Initial Control Setting. . . . . 16

    Start-up. . . . . 16

    Normal Operation. . . . . 16

    Operation Under Abnormal Conditions. . . . . 16

    Shutdown. . . . . 16

    Emergency Shutdown. . . . . 16

**Maintenance. . . . . 17**

    Sales/Repair Facility. . . . . 17

    Sales Facilities. . . . . 17

    Troubleshooting. . . . . 17

    Cleaning. . . . . 19

    Inspection. . . . . 19


    Line Section Care. . . . . 19

    Disassembly. . . . . 20

    Repairs. . . . . 20

Contact Adjustment. . . . .	20
Preparation For Reshipment. . . . .	20
Elements. . . . .	20
Line Section. . . . .	21
DC Cables. . . . .	21
Meter. . . . .	21
Storage. . . . .	21
Replacement Parts. . . . .	21

Figure 1  
Outline Drawing

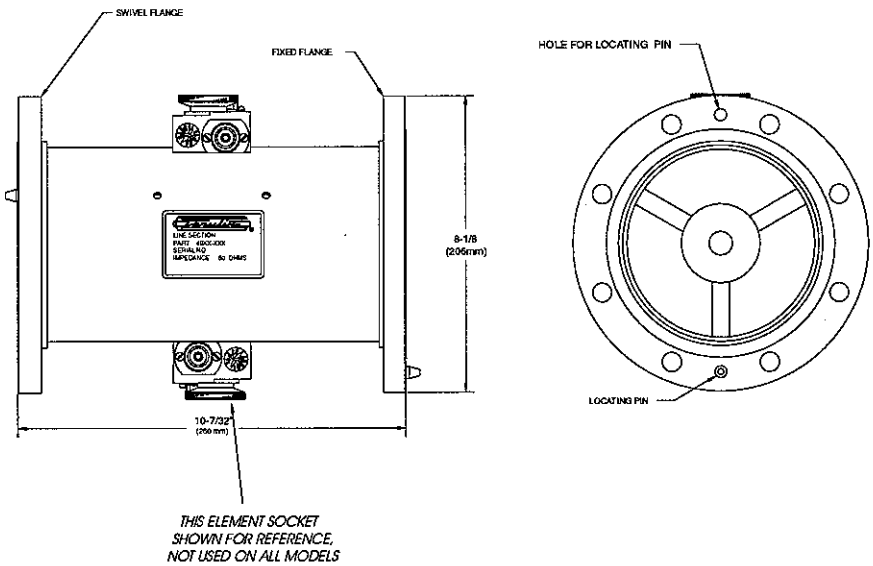

## Chapter 1

## Introduction

This publication refers to the ThruLine Wattmeter Series 4900A. The differences between models are listed in the specifications. All models will generally be referred to as a Wattmeter throughout this manual.

The information in this instruction book pertains to all models except noted differences referred to in the text.

### Purpose and Function

The Bird ThruLine Wattmeters are directional RF wattmeters designed to detect and measure power flow in either direction in 6-1/8 inch, 50 ohm, coaxial transmission lines. Therefore, they are useful for load matching in standard coaxial lines. Power levels are indicated on a direct reading meter in accordance with the elements selected by the user.

### Performance Characteristics and Capabilities

Elements are available for measuring power levels up to 250 kW (60 kW for Models 4902-037A and 4905-300A, and 80 kW for 4902-080A and 4907-080A) full scale in stated frequency bands from 2 to 1000 MHz (50 to 750 MHz for Models 4902-037A, 4905-300A, 4902-080A, and 4907-080A). The maximum measurement error is  $\pm 5$  percent of the power rating of the element. The insertion VSWR (voltage standing wave ratio) will not exceed 1.05:1.00 over the stated frequency band.

### Dimensions and Weight

The flanged line sections of Models 4900A, 4905-200A, 4902-037A, 4905-300A, and 4902-080 are 10-9/32 inches (261.1 mm) from flange face to flange face. The barrel of the line section is 6-1/8 inch (155.6 mm), and the flange fittings are 8-1/8 inch (81.3 mm). The weight of the single socket line section is 16-3/4 lb (7.6 kg), and the double socket is 17 lb (7.7 kg). The unflanged line sections of Models 4907A, 4909-200A, and 4907-080A are 9-5/8 inches (244.5 mm) end to end, and the barrel is 6-1/8 inch (155.6 mm) in diameter. The single socket line section weighs 12-1/2 lb (5.7 kg) and the double socket weighs 12-3/4 lb (5.8 kg). The meter and housing are 5-9/16 inch W x 6-1/2 inch H x 4-11/64 inch L (141 x 165 x 106 mm) and weigh approximately 3 lb (1.36 kg). Add 2 lb (0.9 kg) for the overall shipping weight.

### Power And Utility Requirements

Because ThruLine Wattmeters are passive and self-contained devices, they do not require any utility service or

outside power, other than the RF input power, for operation.

**Environmental Requirements**

Thru-line Wattmeters should be used in a dust and vibration-free environment. Measurements should be made at  $25^{\circ}\text{C} \pm 5^{\circ}\text{C}$  ( $77^{\circ}\text{F} \pm 9^{\circ}\text{F}$ ) for maximum measurement accuracy.

**Items Supplied**

Series 4900A Thru-line Wattmeters consist of:

- (1) Line Section
- Plug-In-Elements
- (1) Meter in a housing
- Connecting Cables.

The line section is a short length of matching 6-1/8 inch coaxial transmission line. For Models 4902A, 4905-200A, 4902-037A, 4905-300A, and 4905-080A the line section has bolt flanges that are fixed on one end and swivel type on the other. Models 4907A, 4909-200A, and 4907-080A are unflanged line sections.

The meter is scaled in 5, 10, and 25 ranges for Models 4902A, 4905-200A, 4907A, and 4909-200A. Models 4902-037A and 4905-300A are scaled in 15, 30, and 60 ranges. The Models 4902-080A, and 4907-080A are scaled for 8 and 80 ranges.

A standard ten foot (approx. three meter) cable/s is supplied with each wattmeter and is equipped with a dc connector plug on one end and lugs on the other. Alternate lengths are available on request. This instruction book is the only other item supplied.

Wattmeters with two separate element sockets (one for Forward and one for Reflected power measurement) are equipped with a dual dc input meter case and two shielded cables. The switch mounted on the meter face selects the desired reading.

**Items Required But Not Supplied**

The coaxial transmission line must be equipped with a 6-1/8 inch flanged or unflanged connectors to match the line section. Additional elements must be ordered for the desired frequency bands and power levels, contact the factory for more information.

**Tools And Test Equipment Required**

A screwdriver, end wrenches or an adjustable wrench for the clamp band or flange screw and nut sets are the only tools required for the Series 4900A Wattmeters.



## Specifications

<b>Impedance</b>	50 ohms nominal
<b>Insertion VSWR</b>	1.05-1.00 maximum
<b>Connectors</b> Models: 4902A, 4905-200A, 4902-037A, 4905-300A, and 4902-080A	6-1/8" EIA Flanged
Models 4907A, 4909-200A, and 4907-080A	6-1/8" Unflanged
<b>Power Range</b> Models: 4902A, 4905-200A, 4907A, and 4909-200A	2.5-250 kW
Models: 4902-037A and 4905-300A	3-60 kW
Models: 4902-080A and 4907-080A	8-80 kW
<b>Frequency Range*</b> Models: 4902A, 4905-200A, 4907A, and 4909-200A	2-1000 MHz
Models: 4902-037A, 4905-300A, 4902-080A, and 4907-080A	50-750 MHz
<b>Accuracy</b>	± 5% of full scale
<b>Dimensions</b> Flanged line section	10-7/32" L x 8-1/8" DIA (260 x 206 mm)
Unflanged line section	9-5/8" L x 6-1/8" DIA (245 x156 mm)
Meter	4-11/64" L x 5-9/16" W x 6-1/2" H (106 x 141 x 165 mm)
<b>Weight, Nominal</b> Flanged line section	17 lb (7.7kg)
Unflanged line section	12-3/4 lb (1.4 kg)
Meter	3 lb (1.4 kg)
<b>Ambient Temperature</b>	25°C ± 5°C (77°F ±9F)
<b>Finish</b> Meter housing	Grey Powder Coat
Line section	Bright silver plate

\*Actual frequency and power ranges are determined by the element used.



Element	The function of the element is to detect (sense) the forward or reflected RF power in the line section at any given time. The direction in which the "arrow" on the element cap is oriented indicates the direction in which it is sensing the RF power flow in the system.
Traveling Wave Viewpoint	The best way to visualize the ThruLine Wattmeter idea is from the Traveling Wave viewpoint on transmission lines. This viewpoint illustrates that the voltages, currents, standing waves, etc., on any uniform line section are the resultants of two traveling waves, forward and reflected.
Coupling Circuit	The coupling circuit, which samples the traveling waves, is in the Plug-In Element (Refer to figure 2). Energy will be produced in the coupling circuit of the element by both mutual inductance and capacitance from the traveling RF waves of the line section. Of course, the inductive currents will flow according to the direction of the traveling waves producing them.

The capacitive portion of these currents is naturally independent of the direction of the traveling waves. Therefore, it is apparent that the inductive portion of the current produced from the waves of one direction will add in phase to the capacitive portion of the current, and those of the opposite direction will subtract in phase. The additive direction is the forward or "arrow" direction of the element.

The forward wave travels and its power flows from the source to the load. It has an RF voltage  $E_f$  and current  $I_f$  in phase, with  $E_f / I_f = Z_0$ .

The reflected wave originates by reflection at the load, travels and its power flows from the load back to the source. It has an RF voltage  $E_r$  and current  $I_r$  in phase, with  $E_r / I_r = Z_0$ .

Each component wave is mathematically simple and is completely described by a single figure for power, for instance:


$$W_f = \text{Watts Forward} = E_f^2 / Z_0 = I_f^2 Z_0 = E_f I_f$$

$$W_r = \text{Watts Reflected} = E_r^2 / Z_0 = I_r^2 Z_0 = E_r I_r$$

$Z_0$  is the characteristic impedance of the uniform line, and simplifies matters by being a pure resistance, usually 50 ohms for useful lines. The main RF line circuit of the Thruline Wattmeter is a short piece of uniform air line section, whose  $Z_0$  is 50 ohms, in which accurate measurements may be made.

The electrical values of the element circuits are carefully balanced and so designed that the inductive current produced from the reverse direction wave will cancel its portion of the capacitive current almost completely. The result is a directivity always higher than 25 dB, which means that the element is highly insensitive (nulled) to the reverse direction wave. By being highly directional, the Thruline Wattmeter is sensitive at either one of its settings, but to only one of the two traveling waves which produce standing waves by interference. Thruline Wattmeter measurements are also independent of their position along the standing waves. The circuitry of the element and its relationship to the other components of the wattmeter are illustrated in figure 2.

Figure 2  
Schematic  
Diagram

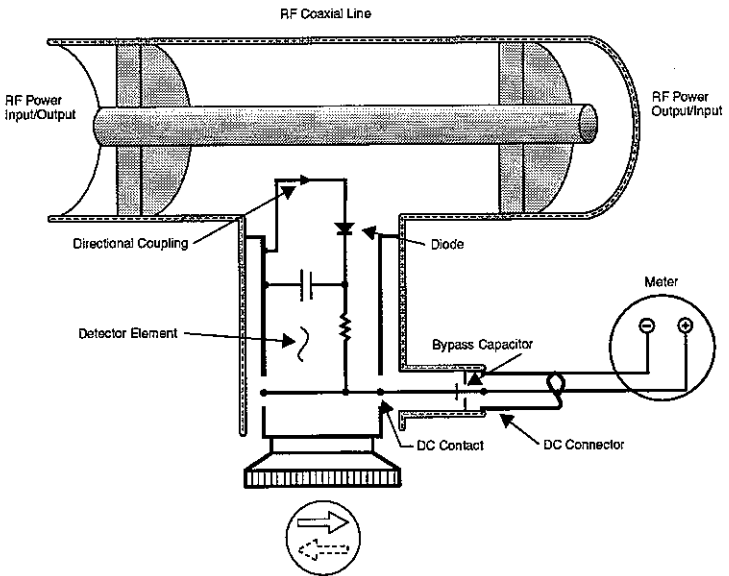

**Element  
Socket**

An accurately positioned socket for inserting a radio frequency coupling device, called a Thruline Plug-In Element, is mounted on the outer conductor. The line sections for 4905-200A, 4909-200A, and 4905-300A have two such sockets. The socket is precision bored to hold the rotatable element in its calibrated position, with a spring-loaded clasp to keep the element firmly seated. The machined step on the top face of the socket engages a stop-pin on the element. Rotary movement of the element is thereby restricted to 180 degrees and is stopped on the axial center line.

The measuring socket has a hole bored through the wall through which an insulated phosphor bronze contact finger projects. The Plug-In Element has terminals on diametrically opposite sides of its body, so that pickup can be made from either side. A small silvered button tip can contact the element only in the precise forward and reflected measuring positions, against the end stops. A specially designed jack mounted on the side of the socket mates with the plug on the dc cable furnished with the read-out meter. The dc jack assembly has a built-in filter capacitor shunted across the meter circuit. This more fully protects meter readings against the adverse effects of any stray RF energy generated in the Plug-In Element. The line section is bright silver plated over practically all of its metal parts.

**Matching****CAUTION**

The Thruline wattmeter, elements, and line section have been calibrated together. Replacing any component without recalibrating all the components as a unit may affect accuracy.

The scale on the read-out meter reads full scale for the power rating stamped on the cap of the Plug-In Element. The Thruline Wattmeter, the Plug-In Element, and the Thruline Section are all stamped with matching serial numbers. The equipment is supplied as a matched and calibrated set and the parts, particularly the elements, should not be interchanged with any other like equipment. Such an interchange of the measuring elements could produce readings with an error greater than the stated  $\pm 5$  percent of full scale accuracy.

**Load Power**

Power delivered to and dissipated in a load is given by:

$$W_L = \text{Load in Watts} = W_f - W_r$$

Where appreciable power is reflected, as with an antenna, it is necessary to subtract the reflected power from the forward power to get the effective power. This correction is negligible, less than 1 percent, if the loading device has a VSWR of 1.2 to 1 or less.

VSWR scales, and their attendant controls for setting the reference point, have been intentionally omitted from the ThruLine Wattmeter for two reasons.

1. Why make something similar to a hypothetical dc volt ohmmeter with control potentiometers for the voltmeter multipliers? Even more complications arise when diodes at RF are involved.
2. Experience using the ThruLine Wattmeter on operating problems, such as transmitter tune-up, antenna matching etc., shows that the power ratio  $\phi$  is no mean competitor, in practical usefulness, to the standing wave ratio  $\rho = \text{VSWR}$ .

A trial is suggested for a few days - forget VSWR and try thinking in terms of  $\phi = W_r / W_f$  when the ThruLine Wattmeter is used. It will be noted that even without bothering to calculate the ratio exactly the two meter readings,  $W_r$  and  $W_f$ , give an automatic mental impression which pictures the situation. Thus, in an antenna matching problem the main objective usually is to minimize  $W_r$ , and anything done experimentally to this end is noted directly when the ThruLine Element is turned to the reflected position. Furthermore, the ratio of readings, even if only mentally evaluated, is a reliable guide to the significance of the remaining reflected power.

**P vs.  $\phi$  and  
its  
Significance**

Since there are definite simple relationships between standing wave ratio  $\rho$  and the reflected/forward power ratio  $\phi$  indicated by the ThruLine Wattmeter, the latter may be conveniently used to measure VSWR.

$$\rho = \frac{1 + \sqrt{\phi}}{1 - \sqrt{\phi}} \quad \text{and} \quad \phi = \left[ \frac{\rho - 1}{\rho + 1} \right]^2 \quad \text{where} \quad \rho = \text{VSWR} \quad \text{and} \quad \phi = \frac{W_r}{W_f}$$

Note that around  $\phi = 10$  percent, below which  $W_r$  will appear insignificant and may be hard to read, you are close to the commonly accepted lower limit  $\rho = 2$ . Trying to ad-


just to an even lower value of  $\phi$ , in order to improve antenna match still further, becomes less and less worthwhile in many systems. Experimentally by using the Thruline Wattmeter it can be readily shown that reducing  $\phi$  below 10 percent produces little in the way of increased  $W_L$ . TV transmitter antenna lines and VHF omnirange transmitters are among those systems that require much lower levels of reflected power but for reasons other than simple power transmission. A very small level of reflected power, e.g.,  $\phi = .06$  percent, corresponds to  $\rho = 1.05$ . With just a single element suitable for measuring  $W_f$ , detection of reflected power is possible down to about  $\phi = 1$  percent ( $\rho = 1.2$ ), providing  $W_f$  approaches full scale. However, measurement is possible only down to about  $\phi = 5$  percent ( $\rho = 1.5$ ).

#### Measuring & Monitoring Transmitter Power

Little more need be said about this in view of the preceding load power discussion. The Thruline Wattmeter is useful for the continuous monitoring of transmitter output and is also helpful for the continuous monitoring of reflected power, for instance in checking intermittent antenna or line faults.

Like diode devices in general, the Thruline meter indicates the carrier component on amplitude modulation, with very little response to side band components added by modulation.

Figure 3  
Coupling Kits

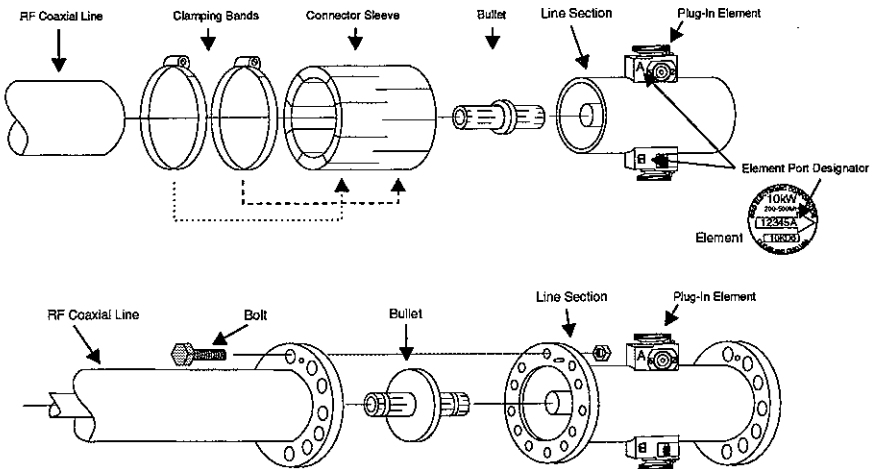



### Items Required

- ♦ ThruLine Wattmeter
- ♦ Elements (ordered separately, P/N depends on Wattmeter model, power level, and frequency ranges)
- ♦ Coupling Kit (ordered separately, P/N depends on transmission line type)
- ♦ DC Cable

### CAUTION

The wattmeter, the ThruLine element and the RF line section, collectively referred to as ThruLine in the remainder of this section, all have matching serial numbers. Do not intermix these parts with parts from other ThruLine equipment.

### General

Install the line section in a 6-1/8 inch 50 ohm coaxial transmission line where the measurement is desired and the insertion coupling is feasible. Be sure that all exposed electrical surfaces, both on the metal contacts and insulators, are thoroughly clean and free of moisture before making the installation.

### Coupling Kits

The line section is a short length of matching 6-1/8 inch coaxial transmission line. For Models 4902A, 4905-200A, 4902-037A, 4902-080, and 4905-300A the line section has bolted flanges that are fixed on one end and swivel type on the other. It is inserted into the existing transmission line with the aid of a coupling kit, P/N 4902-020.


For Models 4907A, 4907-080, and 4909-200A, the line section is unflanged. It is inserted into the existing transmission line with the aid of an unpressurized straight coupling kit, P/N 5-1322. While installing the coupling kit, refer to figure 3.

### Models With Flanged Line Sections

For the models with flanged line sections (Models 4902A, 4905-200A, 4902-037A, 4902-080, and 4905-300A Wattmeters) the center conductor anchor bullets, P/N 4902-015, mate with the center conductor of the 6-1/8 inch 50 ohm coaxial transmission line. This line should be fitted with 6-1/8 inch EIA flanges. It is permissible for the mat-

ing flanges of the stationary line to both be of the rigid type because the line section has a rigid type flange on one end and a swivel type flange on the other.

1. Locate the line section so that the element sockets are oriented for easy access.
2. Be sure the center conductor anchor bullets have been positioned with insulators properly seated in the counterbores.
3. Attach the line section to the transmission line using twelve suitable bolt assemblies (3/8-16 x 1-1/2 nut and bolt assemblies are recommended). These nut and bolt assemblies and the center conductor anchor bullet, P/N 4902-015 are available in a coupling kit, P/N 4902-020.


 Note: It is usually better to attach the fixed flange of the line section first.

4. Tighten evenly all around to get a firm and uniform contact.
5. The coaxial line should be continuous with no bends or offsets in its axial line.


**Models With  
Unflanged  
Line Sections**

For the models with unflanged line sections (Models 4907A, 4909-200A, and 4907-080A Wattmeters) the connector bullets mate with the center conductor of the 6-1/8 inch 50 ohm coaxial transmission line.

1. Locate the line section so that the element sockets are oriented for easy access.
2. Insert the bullets firmly in the center conductor of the line section and push them in until they bottom in the conductor.

 Note: The insulator discs will approximately touch the inside face of the outer conductor.

3. Slide the clamp bands over the transmission line first and then insert the line section into the transmission line.

 Note: Both bullets should be firmly seated in the center conductor with the ends of the line section butted snugly against the ends of the transmission line.

4. Slide the clamp bands over the junctures of the line section and the transmission line. Position the clamp bands approximately 3/4" from the ends of the sleeve.
5. Tighten the clamping screws to complete the installation.
6. The coaxial line should be continuous with no bends or offsets in its axial line.

**Elements** The element port designator is stamped on the line section ports and after the serial numbers on the elements. Be sure to match these designators to achieve stated accuracy.

**Meter** The meter may be placed anywhere within the reach of the dc cable, but avoid locations that are dusty or subject to temperature extremes.


1. Connect the dc cable plug to the jack on the measuring element socket.
2. Ensure the connection is tight and clean to insure accurate readings.



**Zero Adjust**

The meter should be checked for zero set under no power conditions. With no power applied, the meter pointer should set exactly on zero. If adjustment is required, turn the adjustment screw until the pointer is set at zero (Refer to figure 4).

Figure 4  
Zero  
Adjust

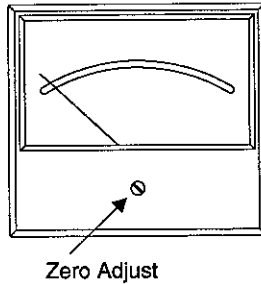

**Use And  
Function Of  
Controls**

**CAUTION**

The ThruLine wattmeter, elements, and line section have been calibrated together. Replacing any component without recalibrating all the components as a unit may affect accuracy.

Measurements are made by the insertion and operation of the Plug-In Elements previously mentioned. The elements have a power range that matches one of the scales on the meter face and the major markings are the power values for that element. Elements are also marked for frequency range. The transmitter power and frequency must be within the range of the element used.

The "arrow" on the element indicates the sensitive direction, i.e., the direction of power flow which the meter will read. Forward and reverse are directional terms used in reference to the ThruLine element and mean respectively the sensitive and null directions of the element. Rotate the element 180 degrees to reverse the sensitive direction. Forward and reflected are directional terms used in reference to the source load circuit. Note that the transmitter output line may be attached to either connector of the RF line section. It makes no differ-

ence which external RF connection is selected, since the elements are reversible and the RF circuit is symmetrical end for end. For Models 4905-200A, 4909-200A, and 4905-300A a FWD (Forward) and RFL (Reflected) selector switch is provided. Used in conjunction with the double socket line section included with these models, it makes measuring the desired power flow much more convenient.

- Initial Control Setting** Direct power readings are made from the wattmeter dial. For double socketed line section models set the selector switch for the desired direction of power measurement.
- Start-up** After the line section is properly installed in the transmission line, and the dc connector cables from the element socket to the meter have been attached (see Chapter 2, Installation), nothing more is required.
- Normal Operation** Insert the appropriate element in the socket of the line section and rotate the element so that the "arrow" on its nameplate is pointed away from the RF source for forward power and towards the source for reflected power. Turn on the RF source and read the power level indicated on the appropriate meter scale.
- Operation Under Abnormal Conditions** The elements for ThruLine Wattmeters can withstand at least a 20 percent overload. If the power to be measured is greater, by a reasonable amount, than the maximum value of the element available, the ThruLine Wattmeter and element may be used to give an indication of power flow even though the pointer is overranged and it is not possible to ascertain the true maximum power.
- Shutdown** Because these ThruLine Wattmeters are passive devices and require no external source of power, they cannot be shut off. The RF source must be shut off instead.
- Emergency Shutdown**

**WARNING**

Never attempt to disconnect the transmission line while RF power is being applied. Leaking RF energy is a potential health hazard.

In case of an overload, it is possible to rotate the element to the midpoint between the forward and reflected positions and thereby electrically decouple the element from the meter. Do not remove the element while RF power is still flowing through the line section.

Any maintenance or service procedure beyond the scope or those provided in this section, should be referred to a qualified service center. Bird Electronic Corporation maintains complete repair and calibration facilities at the following address:

**Sales/Repair  
Facility**

**U.S.A. Sales and Manufacturing  
Service Group**  
Bird Electronic Corporation  
30303 Aurora Road  
Cleveland (Solon), Ohio 44139-2794  
Phone: (440) 248-1200  
Fax: (440) 248-5426

**Sales  
Facilities**

**European Sales Office**  
Bird Electronic Corporation  
Berkhamsted House  
121 High Street  
Berkhamsted  
Hertfordshire  
HP4 2DJ England  
Phone: 44 1 442 870097  
Fax: 44 1 442 870148

**Pan Asian Sales Office**  
Bird Electronic Ltd.  
3A Unit 6 Tyrwhitt Road  
Singapore 0820  
Phone: 65 299 2537  
Fax: 65 299 8509

All instruments returned for service must be shipped pre-paid and to the attention of the Customer Service Group.

**Troubleshooting**

Only those functions within the scope of normal maintenance are listed. This manual cannot list all malfunctions that may occur, or all corrective actions. If a malfunction is not listed or corrected by the listed corrective actions, notify a qualified service center.

The following table contains troubleshooting information for problems which can occur during normal operation.

Locate the problem, review the possible cause, and perform the corrective action listed.

Problem	Possible Cause	Remedy
No meter Indication	No RF power	Check RF source
	Arrow on plug-in element pointed in the wrong direction.	Re-position elements
	No pick-up from dc contact finger.	Adjust per the contact adjustment paragraph.
	Open or short circuit in the dc meter cable.	Replace defective cable (RG-58/U).
	Meter burned out or damaged.	Return wattmeter, line section, and elements to the factory for meter replacement and recalibration.
Intermittent or inconsistent meter readings.	Faulty transmission line.	Inspect line.
	Faulty load	Check load or antenna.
	Dirty dc contact on elements	Clean per the cleaning paragraph
	Sticky or defective meter	Return wattmeter, line section, and elements to the factory for meter replacement and recalibration
High VSWR or reflected power.	Bad load or poor connectors	Replace load or connectors, check and repair antenna.
	Shorted or open transmission line.	Have line serviced. Check connections.
	Foreign material in the line section or in RF connector bodies.	Refer to the Line Section Care paragraph.

**Cleaning**

If any of the contacts or line connectors become dirty, they should be wiped off with a clean cloth and a dry cleaning solvent. Use an aerosol contact cleaner that is self-drying, but forms no residue, on the inaccessible internal parts. Clean all contact areas and especially the exposed faces of the teflon insulators.



It is important to keep the following surfaces clean:

- Socket bore
- Element body circumference
- Bottom rim of element body
- Seat, at the base of the socket, in the line section
- DC contacts on the element

The outside surface of the meter housing can be cleaned with a soft cloth dampened with a mild detergent solution. Do not wipe the meter glass with a dry cloth. A static charge could develop, causing an erroneous indication on the meter.

#### Inspection

Inspect the Thruline unit from time to time for cleanliness and proper adjustment. Make sure all connections are clean and tight. Check the meter with RF power off and adjust the zero setting if necessary.

#### Preventive Maintenance

The element socket should be kept plugged as much as possible to prevent the intrusion of dust. If a Plug-In Element is to be used for this purpose, use the highest power element available. The element should be positioned so that the "arrow" is pointing midway between the FWD and RFL measuring positions. This will not only protect the meter by shunting the movement, but will also avoid exposing the element's diode to dangerous potentials if the RF line section should be energized.

#### Line Section Care

#### CAUTION

Do not attempt to remove the RF center conductor. It is tightly frozen in place and any attempt to remove it will ruin the assembly.

If there is any evidence of contamination inside the RF line section, the reachable portions should be cleaned and the interior carefully blown out. Keep all connections tight, and keep the nut of the meter cord plug turned tight on the line section dc jack. This connection may often be serviced by simply loosening the nut of the dc plug, rotating the body several times through a fraction of a turn and retightening the knurled nut securely.

## Disassembly

### CAUTION

Do not attempt to remove the RF center conductor. It is tightly frozen in place and any attempt to remove it will ruin the assembly.

There is no disassembly possible of the ThruLine unit other than the disconnection of the line section and the dc cable (Refer to Chapter 3, Installation).

### Repairs

There are no replacement parts furnished with this equipment. As previously mentioned, components of these matched units cannot be interchanged or individually replaced. The only replaceable portions of the line section are standard parts of coaxial line fastenings.

### Contact Adjustment

In cleaning the socket bore, be careful not to disturb the spring finger of the dc contact. It is important that the operating position of this part be properly maintained. If the spring finger of the dc contact requires adjustment, it may be done manually if carried out with care. The tip must be positioned far enough out to maintain good contact with the element but not so far as to interfere with easy entry of the element body. Follow the instructions below for adjustment instructions.

1. Detach the dc jack, with attached spring finger, for service by removing the two 4-40 fillister head machine screws which fasten it to the side of the RF line section.
2. Lift off the jack assembly, carefully to avoid losing the small teflon insulating bead, that straddles the base of the phosphor bronze spring and nests in a counterbore on the side of the RF body.

When replacing the assembly, reverse the above directions and be sure that the bead is again properly inserted.

## Preparation For Reshipment

### Elements

The elements can be left in the sockets of the line section with their "arrows" turned midway between the measuring positions. Two additional elements can be placed in the storage sockets in the sides of the meter housing, if so equipped. Any additional elements should

be well padded and wrapped before being put in the shipping container.

- Line Section** Wrap the connectors on the flanged models with padding and tape them securely in place. Cover both ends of the line section and the socket to keep out dust and foreign material. Place the line section in a sturdy shipping container.
- DC Cables** Pad and wrap the dc connector plugs and then coil the cables tightly. For convenience place them in the open back of the meter housing.
- Meter** Cover the meter face with padding to protect the glass window, then wrap the housing and place it in the same box as the line section.
- Storage** No special preparations for storage are necessary other than to cover the equipment to keep out dust and dirt. Store these units in a dry and dust-free environment where the ambient temperature will remain within  $-10^{\circ}\text{C}$  to  $+40^{\circ}\text{C}$  ( $14^{\circ}\text{F}$  to  $104^{\circ}\text{F}$ ). For an extra precaution, leave an element in the socket with the "arrow" turned midway between the measuring positions.

### Replacement Parts

As mentioned previously, there are no field replaceable parts except the following:

Item	Qty.	Description	Part Number
1	1	<b>Cable Assembly:</b> Model 4902A & 4902-037A Model 4905-200A, 4905-300A & 4909-200A Model 4902-080A, 4907A & 4907-080A	6810-214-1 6810-213-1 6810-213-1
2	1	<b>Housing Assembly</b>	6810-205
3	1	<b>Housing Cover Assembly</b>	6810-204
4	1	<b>DC Connectors, Line Section</b>	3610-027
5	2	<b>Coupling Kit:</b> Model 4902A, 4902-037A/080A, 4905-200A & 4905-300A Model 4907A, 4907-080A & 4909-200A	4902-020 5-1322

The following listings are for reference only:

Item	Qty.	Description	Part Number
6	1	<b>Meter &amp; Housing Assembly:</b> Model 4902A Model 4902-037A Model 4905-200A & 4909-200A Model 4902-080A Model 4905-300A Model 4907A Model 4907-080A	6810-309-7 6810-307 6810-220 6810-305 6810-230 6810-255 6810-265
7	2	<b>Meter (only):</b> Model 4902A & 4905-200A Model 4902-037A, 4905-300A & 4909-200A Model 4902-080A, 4907A & 4907-080A	2150-230 2150-259 2150-268
8	1	<b>Line Section:</b> Single socket EIA flanged Double socket EIA flanged Single socket unflanged Double socket unflanged	4902 4905 4907 4909

### Limited Warranty


All products manufactured by Seller are warranted to be free from defects in material and workmanship for a period of one (1) year, unless otherwise specified, from date of shipment and to conform to applicable specifications, drawings, blueprints and/or samples. Seller's sole obligation under these warranties shall be to issue credit, repair or replace any item or part thereof which is proved to be other than as warranted; no allowance shall be made for any labor charges of Buyer for replacement of parts, adjustment or repairs, or any other work, unless such charges are authorized in advance by Seller.

If Seller's products are claimed to be defective in material or workmanship or not to conform to specifications, drawings, blueprints and/or samples, Seller shall, upon prompt notice thereof, either examine the products where they are located or issue shipping instructions for return to Seller (transportation-charges prepaid by Buyer). In the event any of our products are proved to be other than as warranted, transportation costs (cheapest way) to and from Seller's plant, will be borne by Seller and reimbursement or credit will be made for amounts so expended by Buyer. Every such claim for breach of these warranties shall be deemed to be waived by Buyer unless made in writing within ten (10) days from the date of discovery of the defect.

The above warranties shall not extend to any products or parts thereof which have been subjected to any misuse or neglect, damaged by accident, rendered defective by reason of improper installation or by the performance of repairs or alterations outside of our plant, and shall not apply to any goods or parts thereof furnished by Buyer or acquired from others at Buyer's request and/or to Buyer's specifications. In addition, Seller's warranties do not extend to the failure of tubes, transistors, fuses and batteries, or to other equipment and parts manufactured by others except to the extent of the original manufacturer's warranty to Seller.

The obligations under the foregoing warranties are limited to the precise terms thereof. These warranties provide exclusive remedies, expressly in lieu of all other remedies including claims for special or consequential damages. IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS, AND NO PERSON IS AUTHORIZED TO ASSUME FOR SELLER ANY OBLIGATION OR LIABILITY NOT STRICTLY IN ACCORDANCE WITH THE FOREGOING.



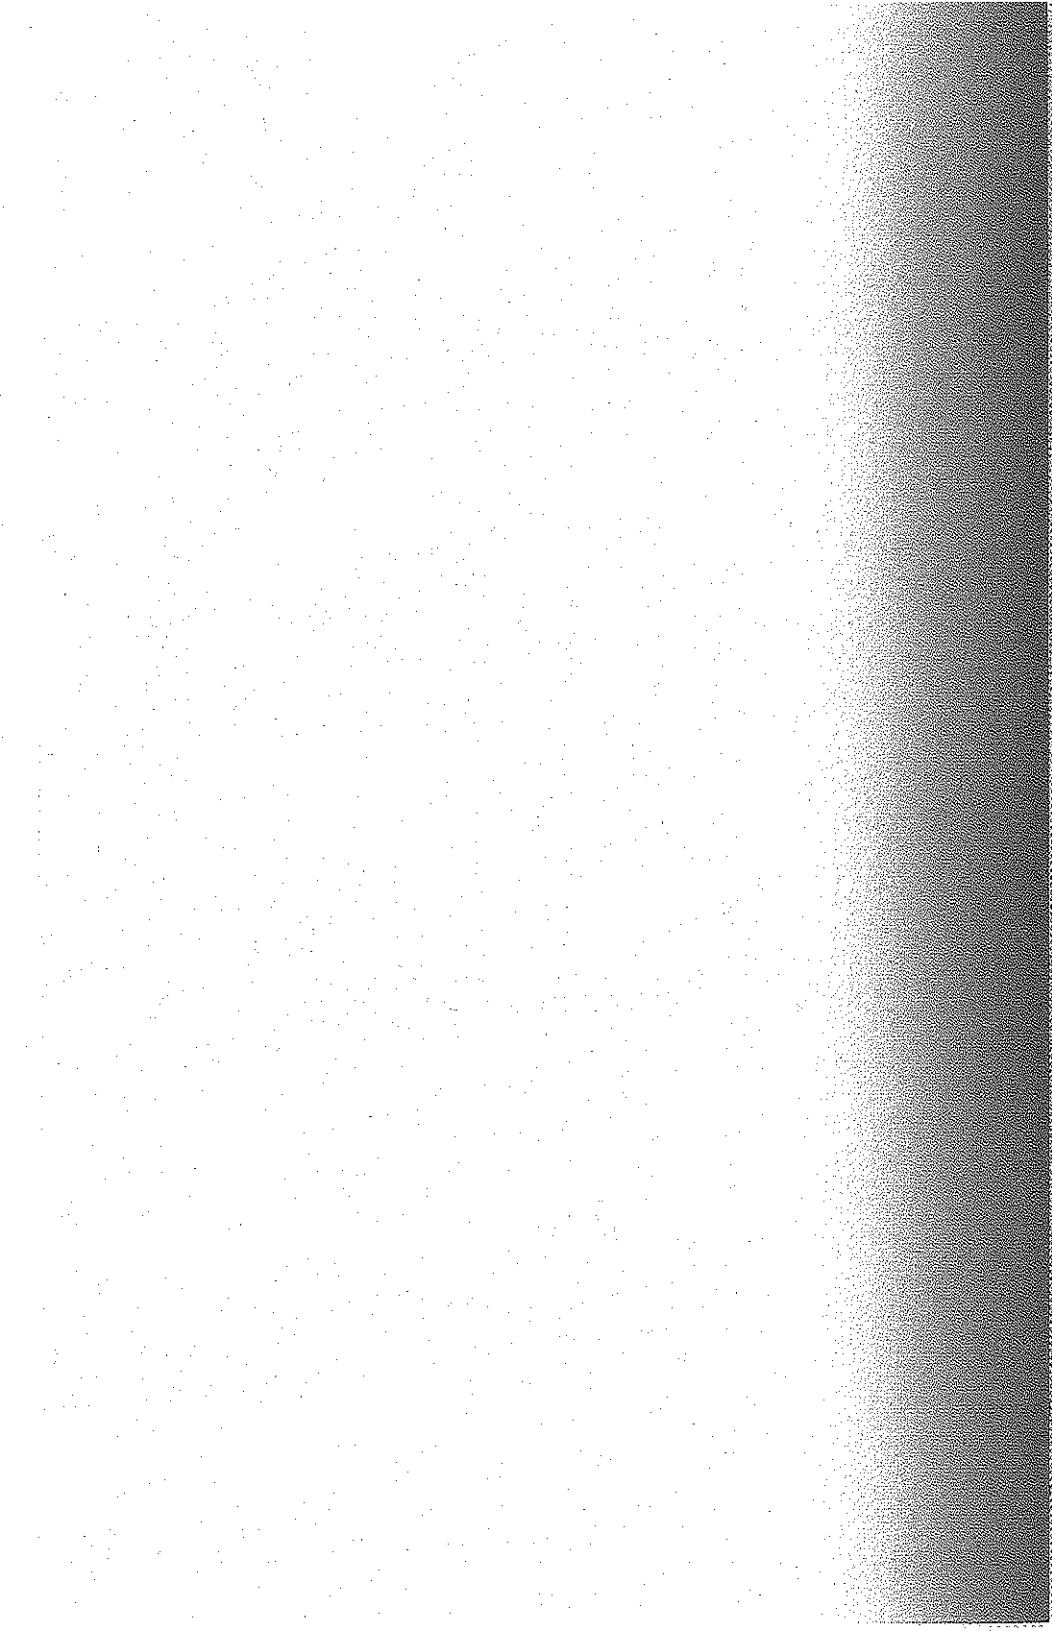

**QUALITY INSTRUMENTS  
FOR RF POWER MEASUREMENTS**

From 2 to 2700 MHz and from 25 milliwatts  
to 250 kilowatts in 50 ohm coaxial line systems

---

**TERMALINE®**

**ABSORPTION  
WATTMETERS**

**LOAD RESISTORS**

**CALORIMETERS**

---

**THRULINE®**

**DIRECTIONAL  
MONITORING  
WATTMETERS**

---

**TENULINE®**

**ATTENUATORS**

---

**COAXSWITCH®**

**SELECTOR  
SWITCHES**

---

**COAXIAL RF FILTERS**

---

**SENTRILINE®**

**FILTER-COUPLEDERS**

---

**BIRO**

**ELECTRONIC CORPORATION**  
30303 Aurora Road Cleveland, (Solon) Ohio 44139-2794